




ADVANCED ENGINEERING... ONLY FROM PRINCE.



**prince**  
rule the court.™

**O<sup>3</sup> RED**  
STRINGING INSTRUCTIONS

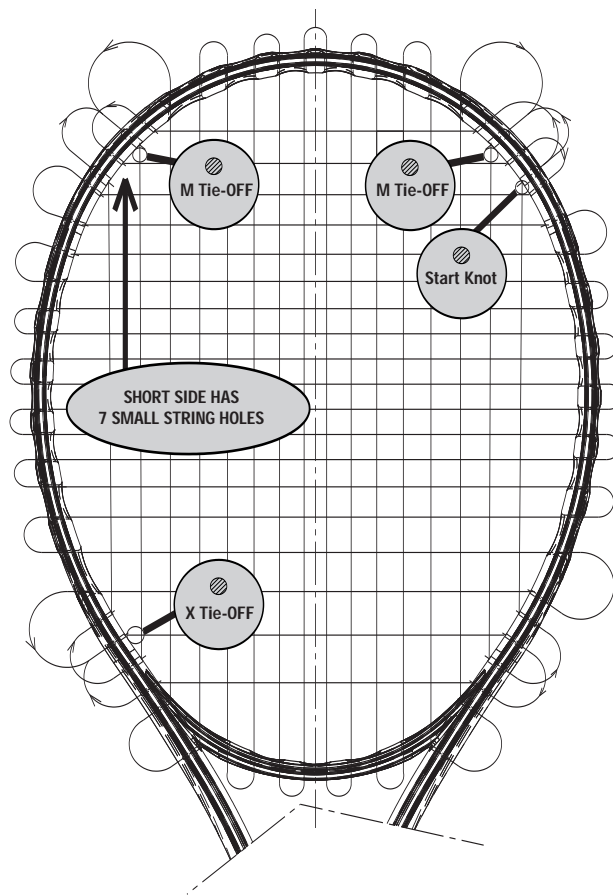

© Prince Sports, Inc.  
One Advantage Court • Bordentown, NJ 08505 • [princetennis.com](http://princetennis.com)

1-800-2-TENNIS or 609.291.5800  
fax 609.291.5900

For additional racquet stringing instructions, visit [princetennis.com](http://princetennis.com)

## STRINGING INSTRUCTIONS

### Length:

(2PR) 18" each for M's and X's

(1PO) SS equals 9" (total 36")

Pattern: 16M x 19X

### M STRING

Start M's at head.

M's skip 7H, 9H, 7T, 9T.

No shared holes

### X STRING

Cross strings are not symmetrical

LEFT SIDE have 7 small string holes

RIGHT SIDE have 6 small string holes

Start X's at 7H RIGHT SIDE

Bottom X at 7T

### TIE OFF

M's at 8H RIGHT SIDE and LEFT SIDE

X's at 9T LEFT SIDE and 10H

RIGHT SIDE

### KEY

M = Main String

X = Cross String

H = Head (top)

T = Throat

L = Left Side

R = Right Side

 


SS = Short Side

2PR = 2 Piece stringing recommended

1PO = 1 Piece stringing option

### Note:

- Prince requires X's to be installed at top of all racquets.
- Bottom to top installed X's will void warranty.
- O3 racquet designs are unique because they do not need plastic grommets to protect the strings.
- **Caution:** Use care when inserting an awl into shared string holes to prevent frame damage.

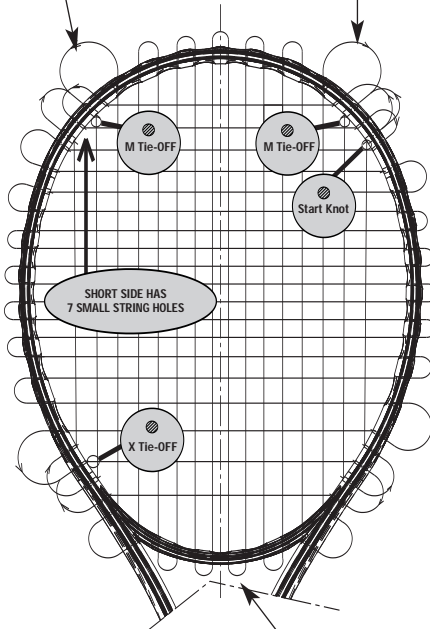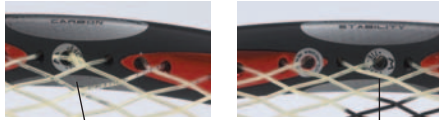


Note: String must be inserted through the hole in the throat elastomer at the 6 o'clock position of the frame as shown.

← LEFT SIDE                      RIGHT SIDE →

## PRINCE® BOOMERANG TOOL

Stringing a Prince O3 racquet is easier than a standard racquet thanks to its unique design and this easy to use boomerang tool.

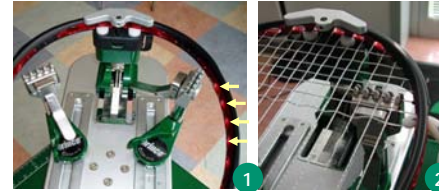

1: Note that when tensioning the upper cross strings in the first 4 upper "O Ports" there is a tendency for the racquet to rotate. This may cause the string that is being tensioned to move toward the previously tensioned cross string. This can be prevented by using the boomerang tool. Another option is to use the brake on the machine to prevent the racquet from rotating.

2: Correct position for the boomerang tool.

3: Pass the string through the inside of the O Port. Insert the boomerang tool into the O Port as shown. Position the string into the boomerang tool groove.

4: Pull the string

5: Clamp the string as usual. Release the tension and remove the boomerang.