




ADVANCED ENGINEERING... ONLY FROM PRINCE.



prince
rule the court.™

3 TOUR
STRINGING INSTRUCTIONS

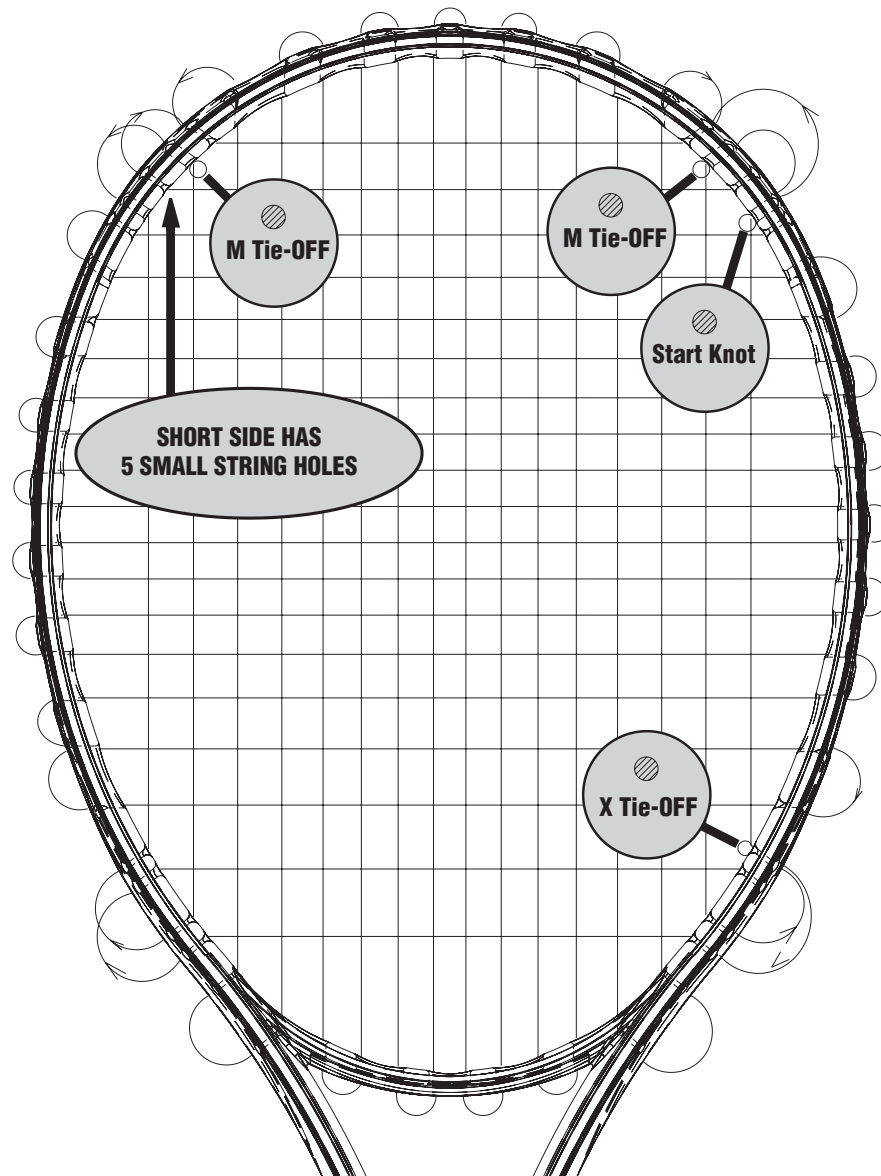

© Prince Sports, Inc.
One Advantage Court • Bordentown, NJ 08505 • princetennis.com

1-800-2-TENNIS or 609-291-5800
fax: 609-291-5900

For additional racquet stringing instructions, visit princetennis.com

O³ TOUR

STRINGING INSTRUCTIONS

Length:
(2PR) 18' each for M's and X's
(1PO) SS equals 9' (total 36')
Pattern: 16M x 18X

M STRING

Start M's at head
 M's skip 8H, 8T
 No shared holes

X STRING

Cross strings are not symmetrical
 LEFT SIDE has 5 small string holes
 RIGHT SIDE has 6 small string holes
 Start X's at 8H RIGHT SIDE
 Bottom X at 8T

TIE OFF


M's at 7H LEFT SIDE and RIGHT SIDE
 X's at 9T RIGHT SIDE and
 9H RIGHT SIDE

KEY

M = Main String
 X = Cross String
 H = Head (top)
 T = Throat
 L = Left Side R = Right Side
 SS = Short Side
 2PR = 2 Piece stringing recommended
 1PO = 1 Piece stringing option


Note:

- Prince requires X's to be installed at top of all racquets.
- Bottom to top installed X's will void warranty.
- O3 racquet designs are unique because they do not need plastic grommets to protect the strings.
- **Caution:** Use care when inserting an awl into shared string holes to prevent frame damage.

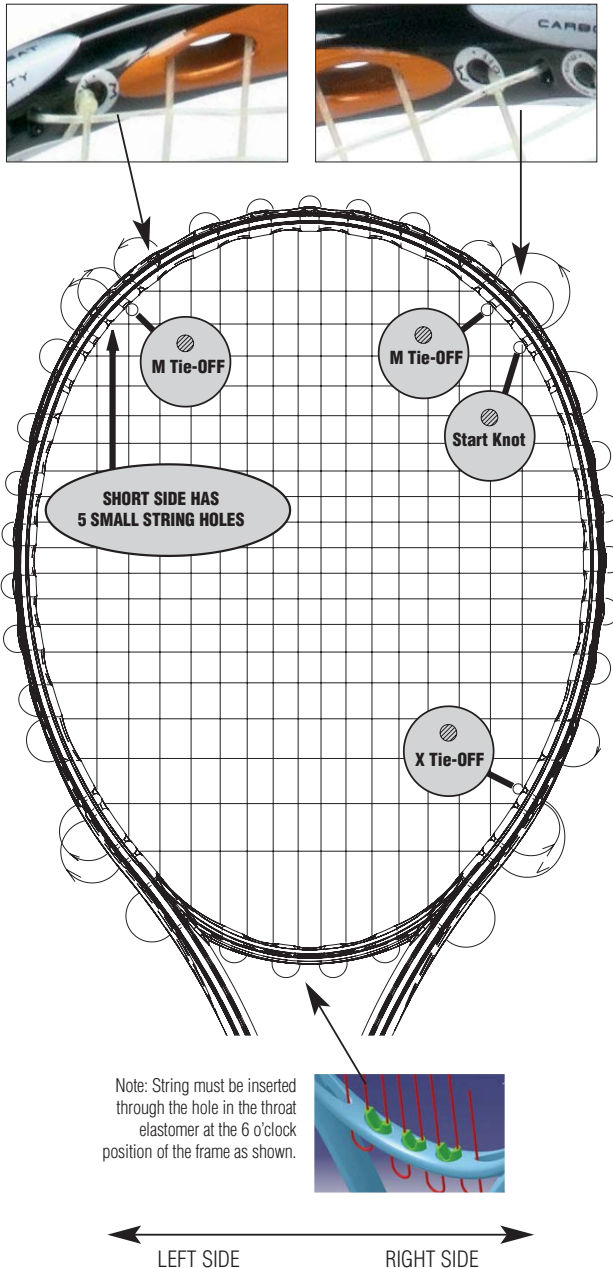

PRINCE® BOOMERANG TOOL

Stringing a Prince O3 racquet is easier than a standard racquet thanks to its unique design and this easy to use boomerang tool.

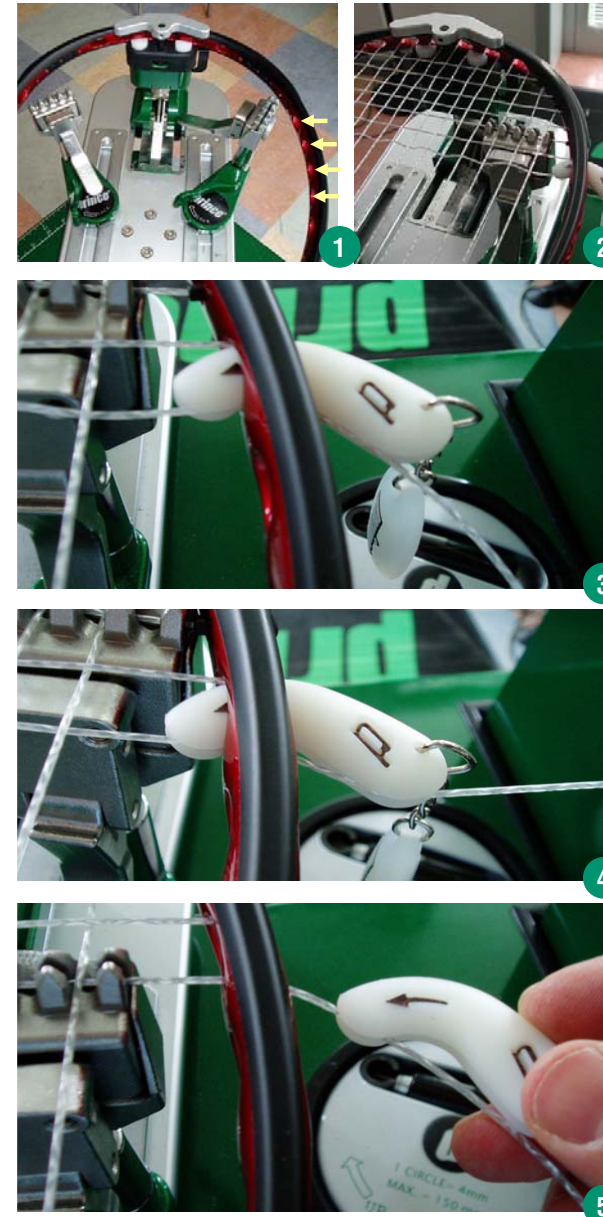

- 1: Note that when tensioning the upper cross strings in the first 4 upper "O Ports" there is a tendency for the racquet to rotate. This may cause the string that is being tensioned to move toward the previously tensioned cross string. This can be prevented by using the boomerang tool. Another option is to use the brake on the machine to prevent the racquet from rotating.
- 2: Correct position for the boomerang tool.
- 3: Pass the string through the inside of the O Port. Insert the boomerang tool into the O Port as shown. Position the string into the boomerang tool groove.
- 4: Pull the string.
- 5: Clamp the string as usual. Release the tension and remove the boomerang.

