

prince



STRINGING INSTRUCTIONS

Model: TX200A-100

Pattern: 16M x 19X

Length: TBD (2PO)

M' String

Start M's at head. M's skip 7H, 9H, 7T and 9T. No share holes. 1 string per hole required.

X' String


Start X's at 7H.

Bottom X: 7T.

Tie Off

M's at 8H.

X's at 10H & 8T.

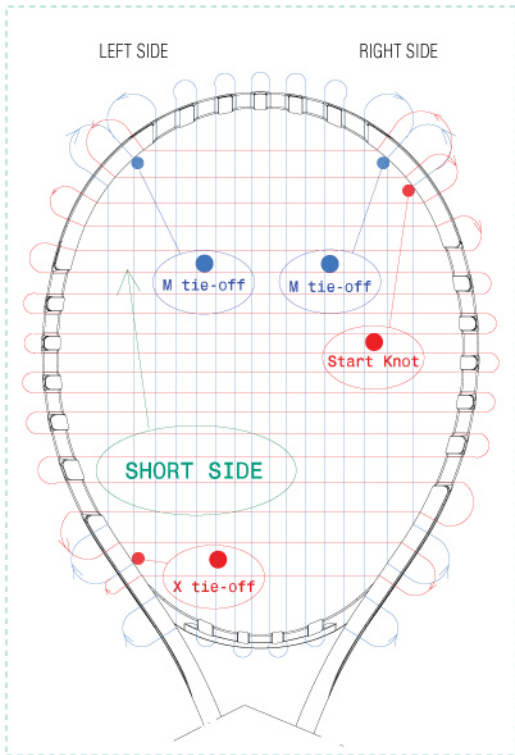

PRINCE requires X's to be installed top of the bottom on all racquets. Installing crosses starting from the bottom will void the warranty.