

prince



STRINGING INSTRUCTIONS

Model: TX201A-97

Pattern: 16M x 18X

Length: TBD (2PO)

M' String


Start M's at head. M's skip 7H, 9H, 7T and 9T. No share holes.

X' String

Start X's at 7H.
Bottom X: 7T.

Tie Off

M's at 8H.
X's at 10H & 8T.

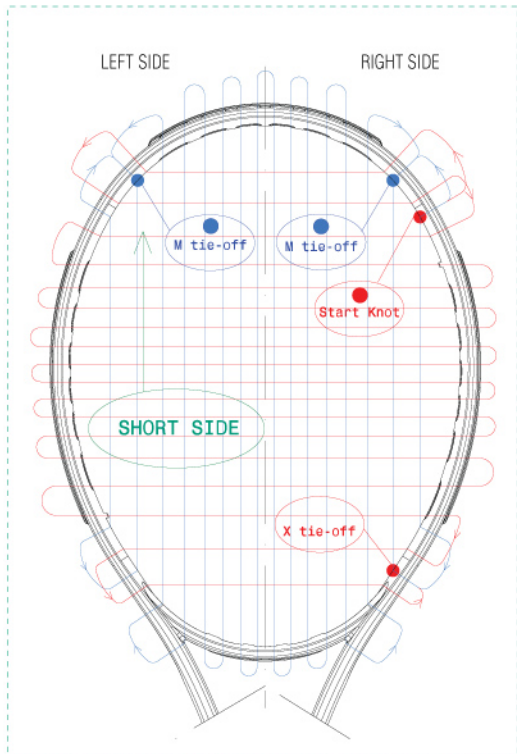

PRINCE requires X's to be installed top of the bottom on all racquets. Installing crosses starting from the bottom will void the warranty.